

Blank template for your own design.



Side view. Draw design, cut it out and trace on the wood. Flip the block around and repeat on the opposite side. This is necessary as you will need to make sure you are making even cuts on both sides if you are using a coping saw to cut out the design.





Top or bottom view. Use this view if making any cuts out of the sides of the car. As in the above step, trace the outline on the top and bottom so that your cuts are even if using a coping saw.




Front view.



Back view.

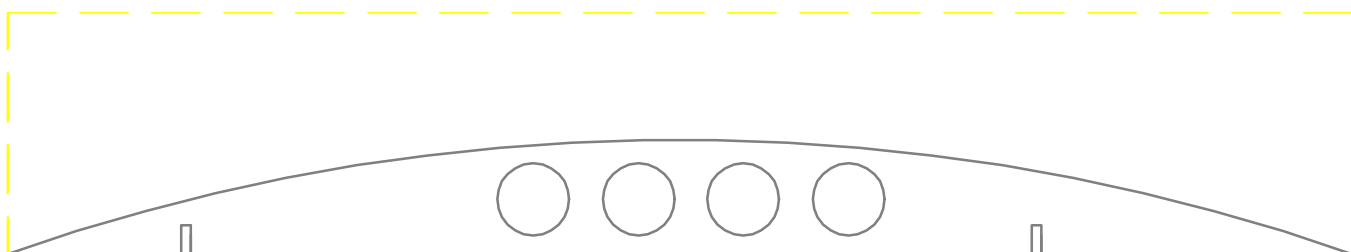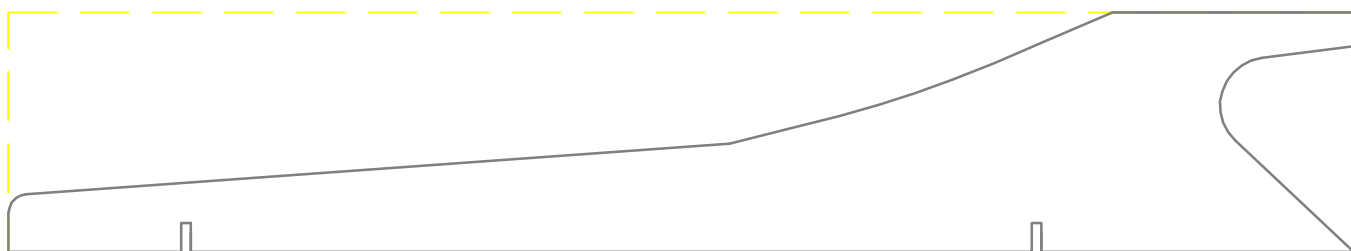


3/8" HOLES FOR WEIGHT

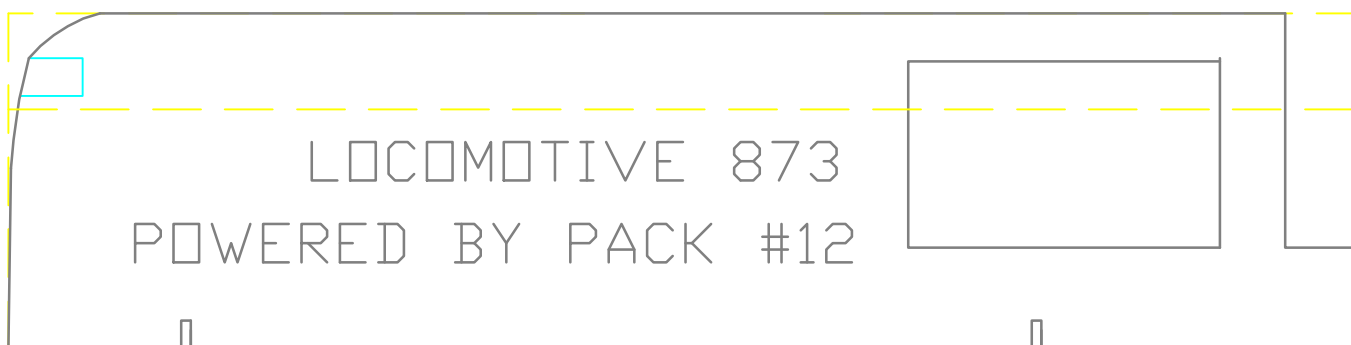



LOCOMOTIVE 873


POWERED BY PACK #12

GLUE EXTRA WOOD TO BLOCK FOR REQUIRED HEIGHT

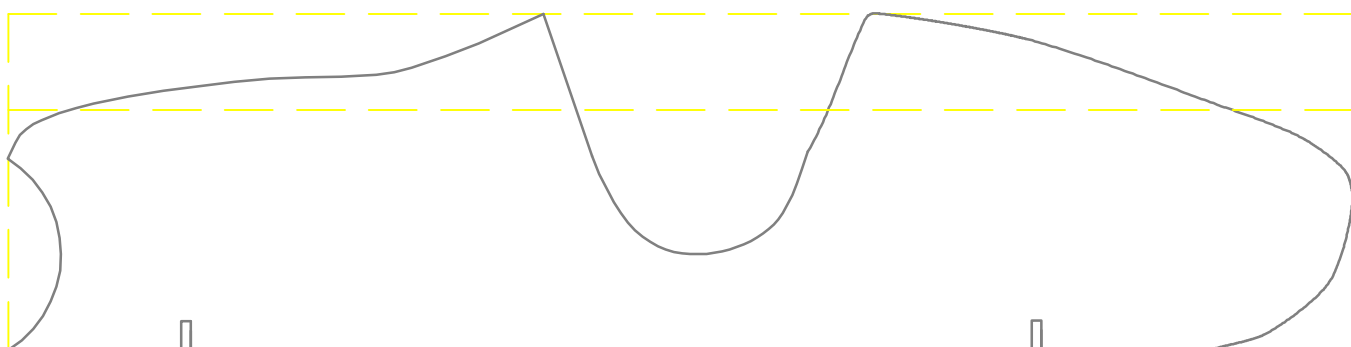

GLUE EXTRA WOOD TO BLOCK FOR REQUIRED HEIGHT

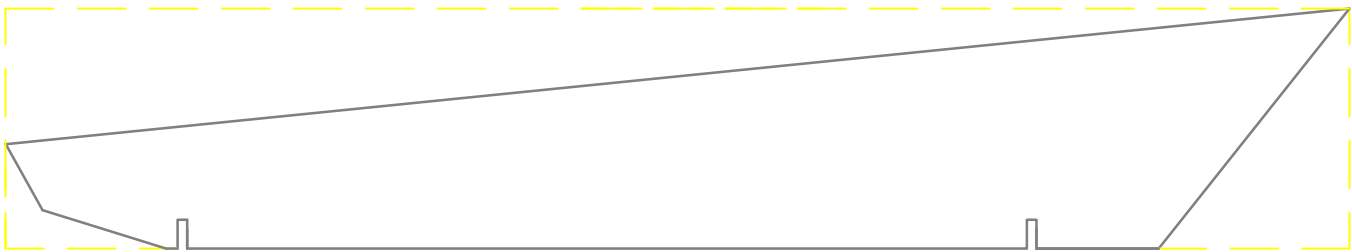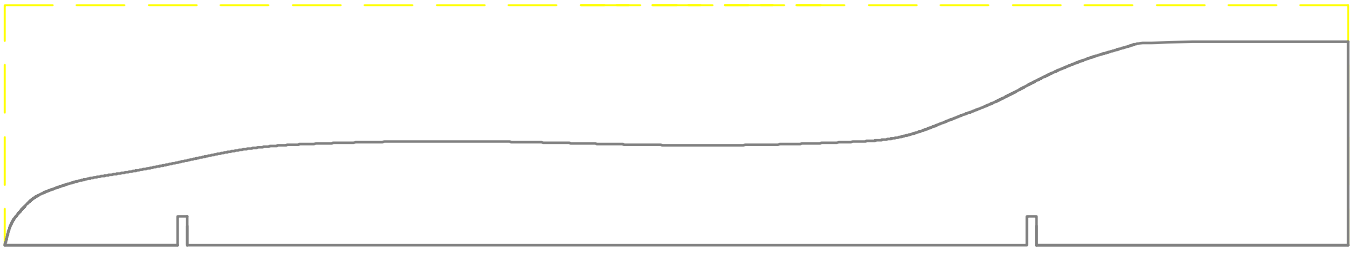


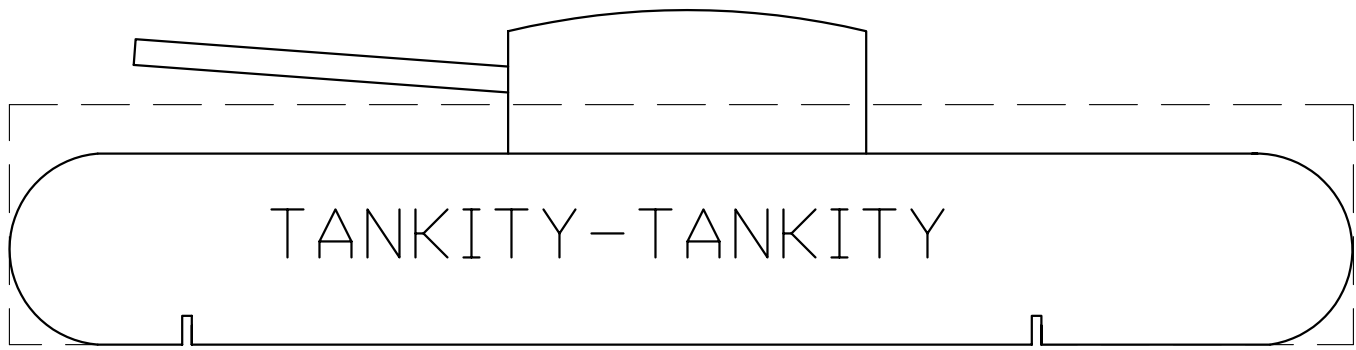



TANKITY-TANKITY

ADD WOOD FOR TURRET AND BARREL







ADD WEIGHT IN 3/8" HOLES

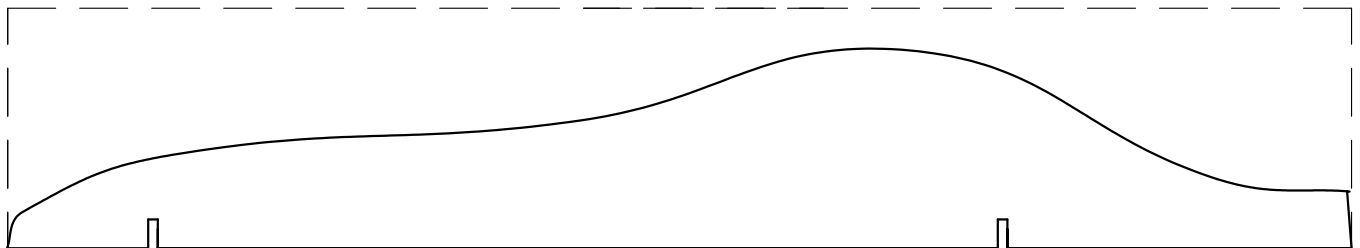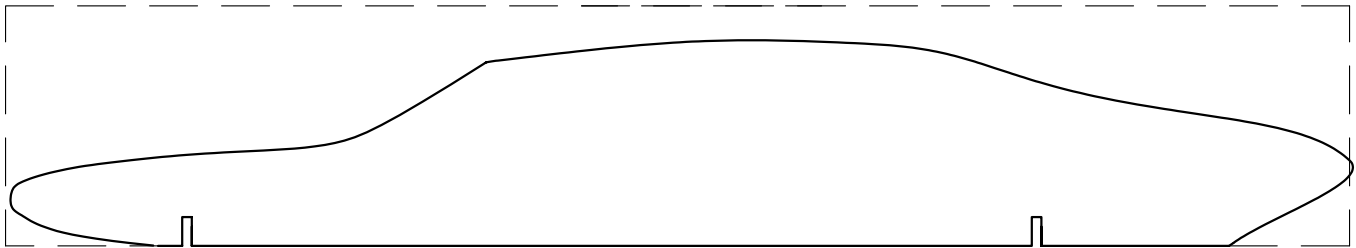

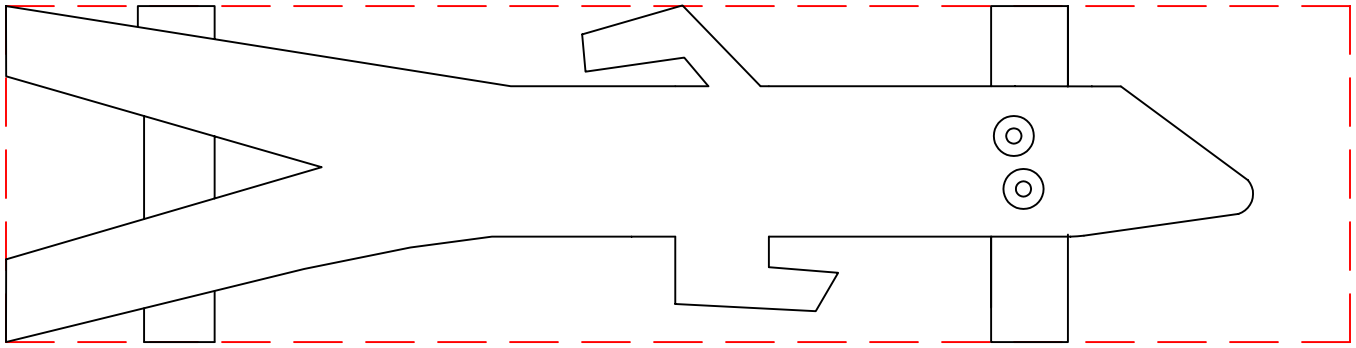



GUMBY

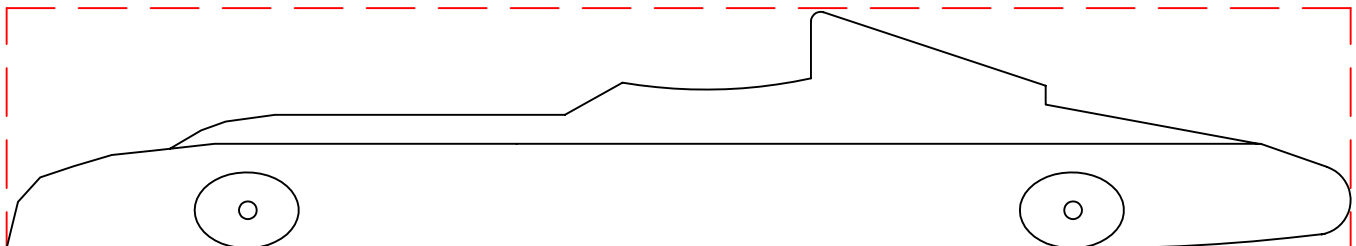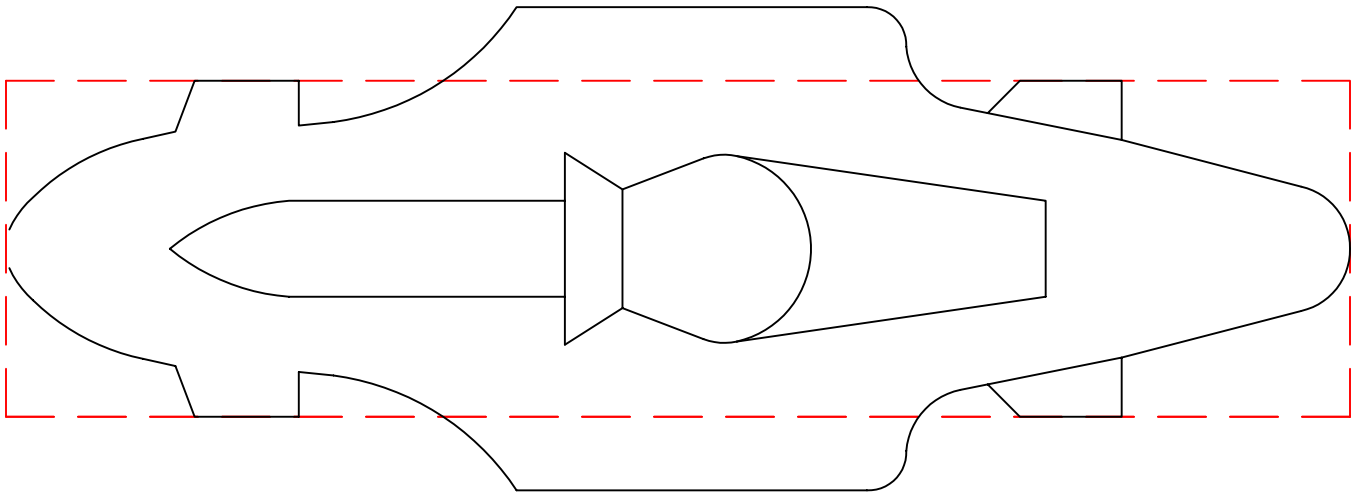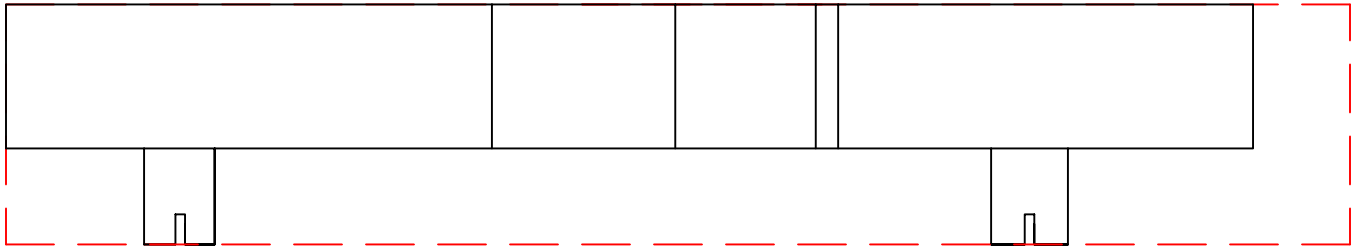

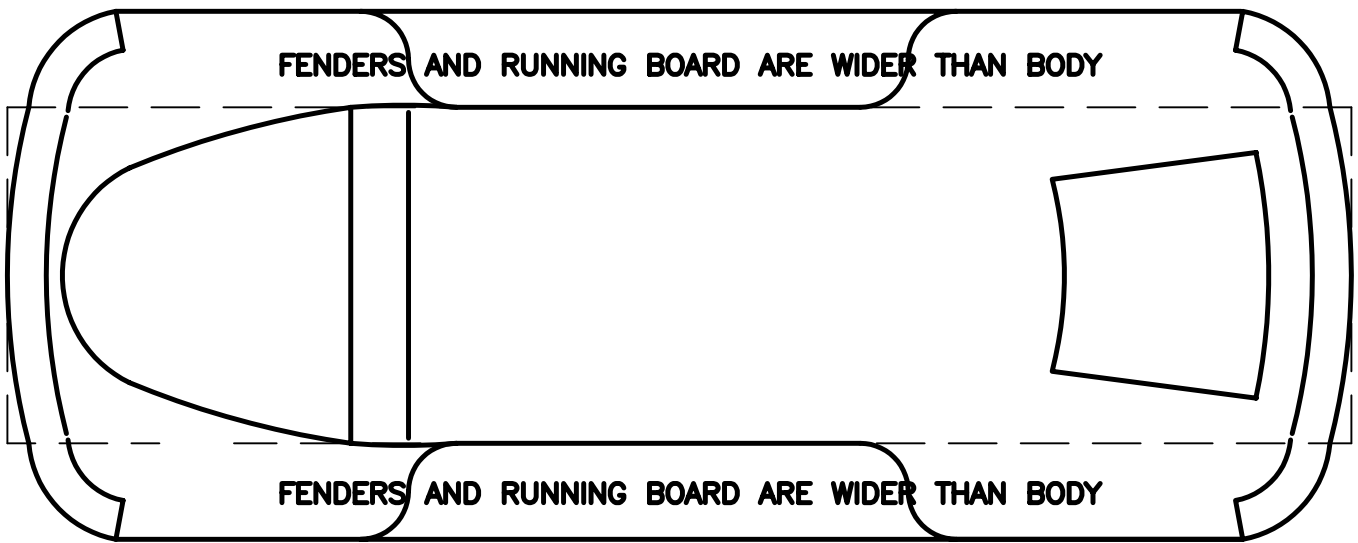


"BUG TOP VIEW"

ADD EXTRA WOOD FOR HEIGHT AND WIDTH

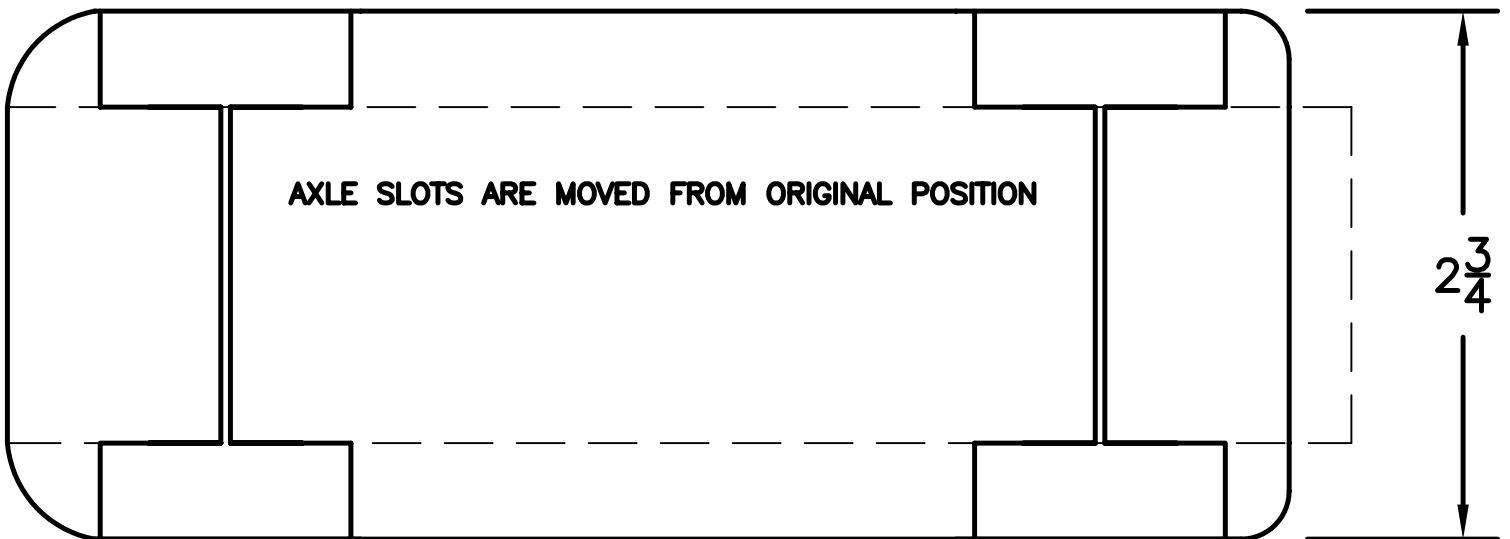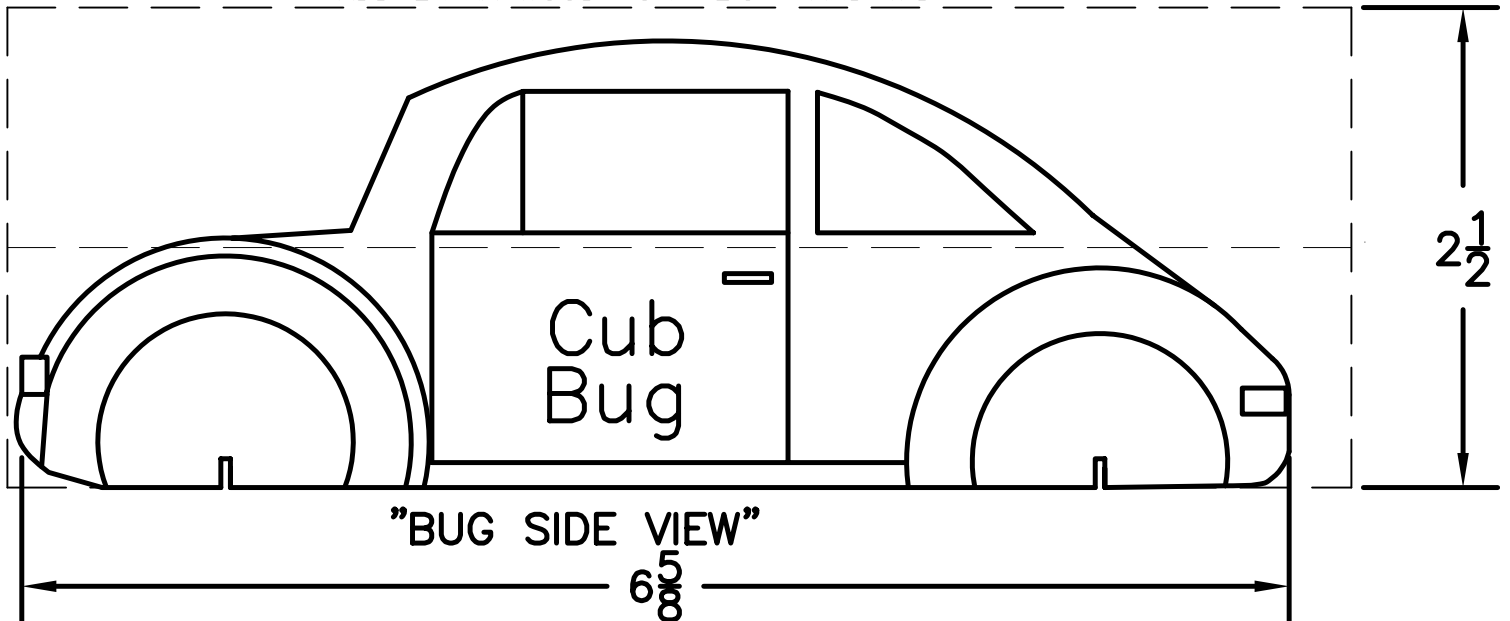


"BUG BOTTOM VIEW"

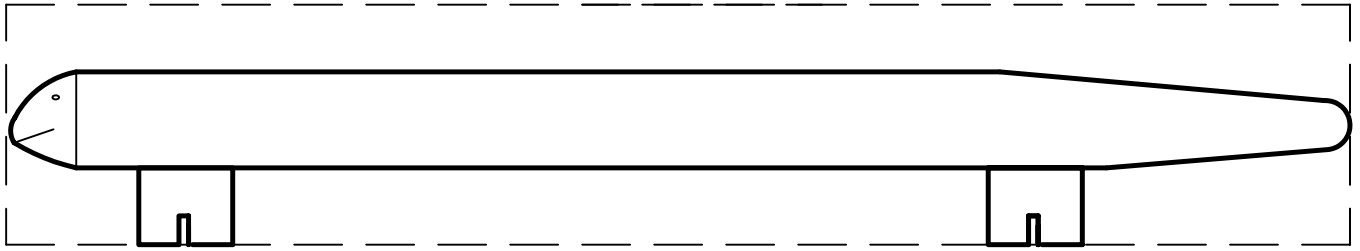


"SNEAKY SNAKE SIDE VIEW"



FRAGILE DESIGN, USE REINFORCEMENT

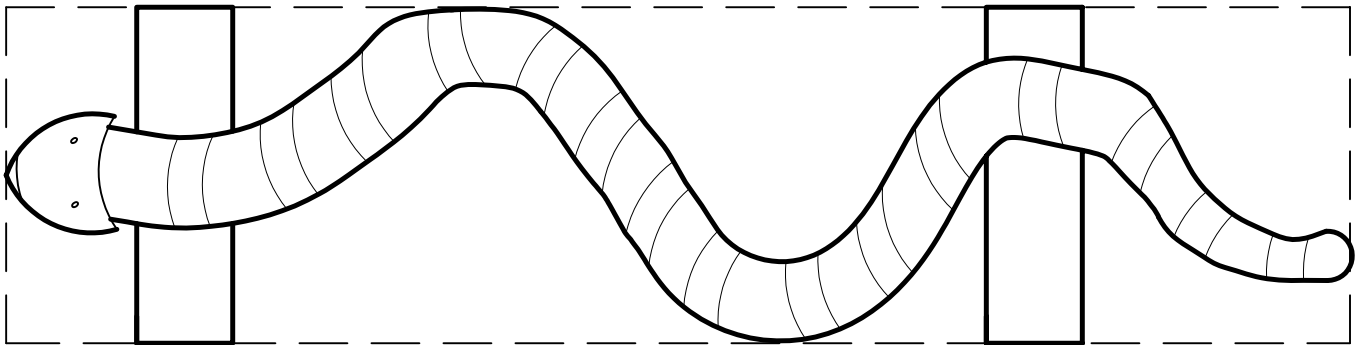

"SNEAKY SNAKE TOP VIEW"


1/8" WOOD DOWELS

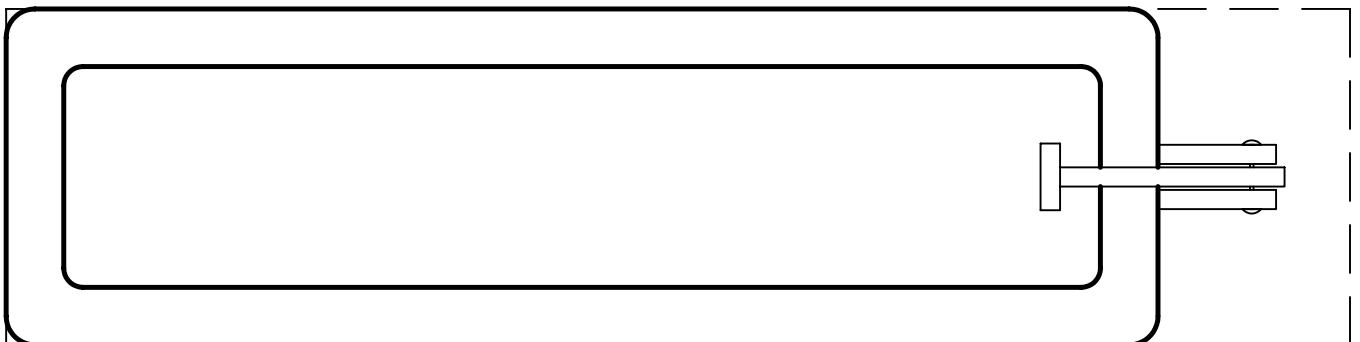

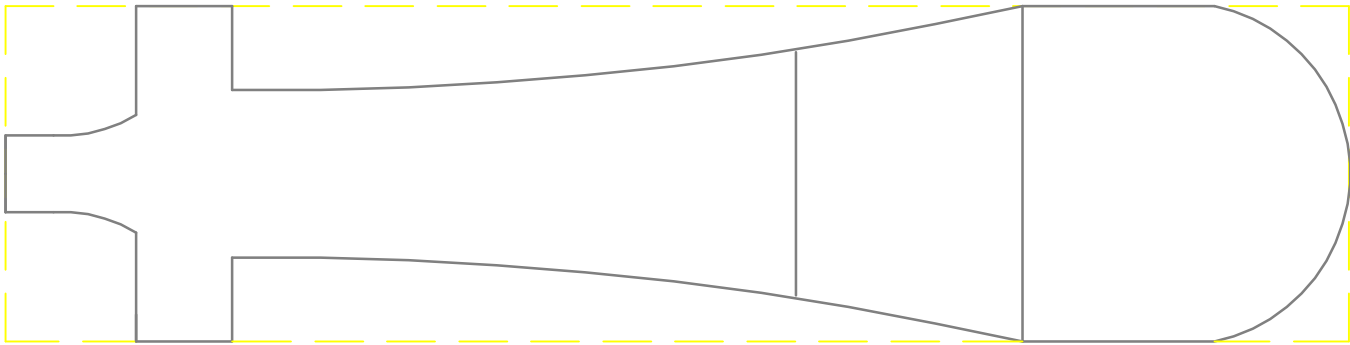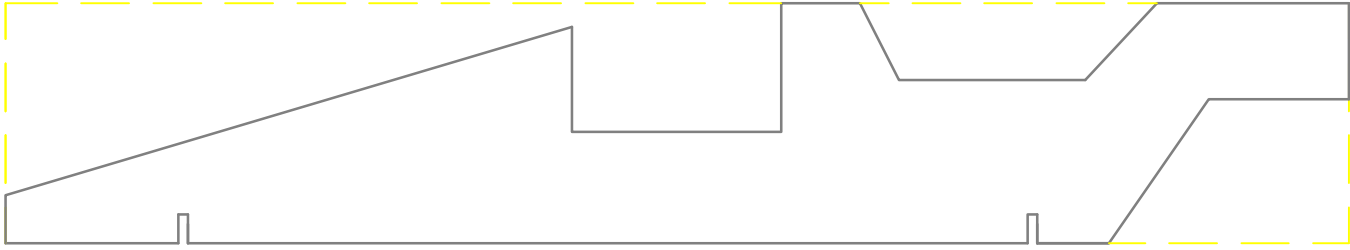

"DRAGSTER TOP VIEW"




"DRAGSTER"

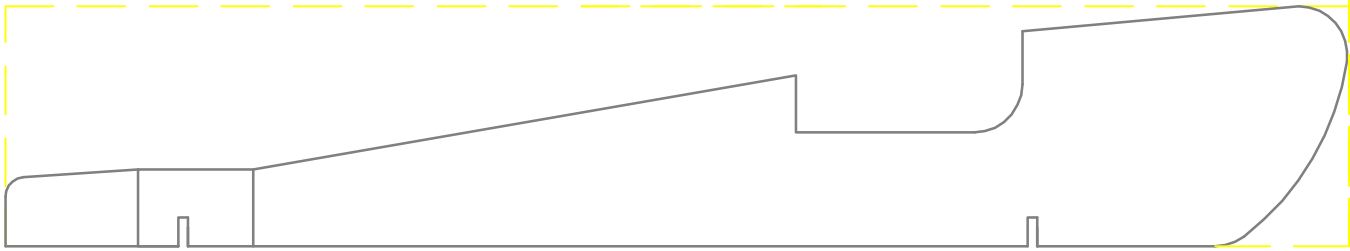

"SLOW SHORT STUFF"




ADD WEIGHT IN 3/8" HOLES

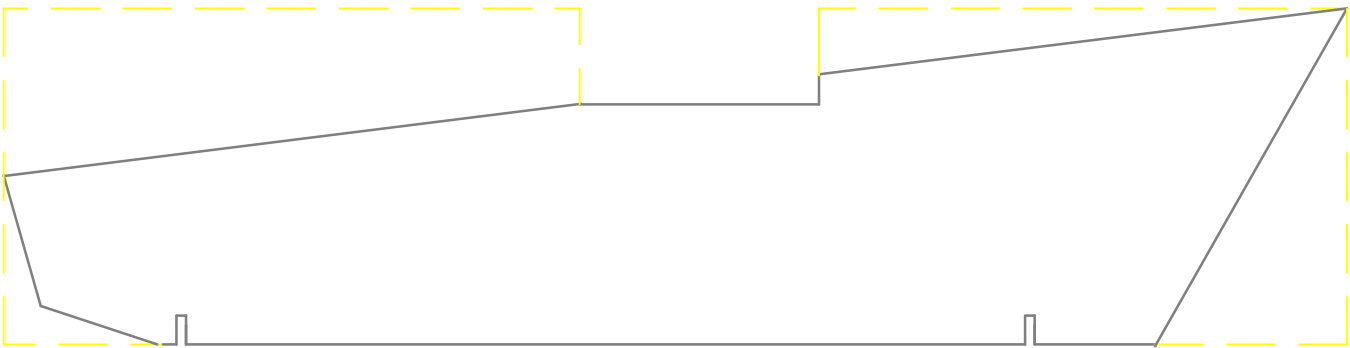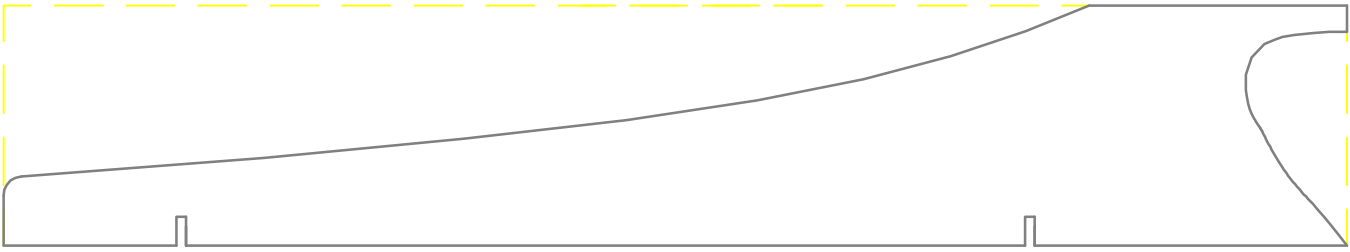
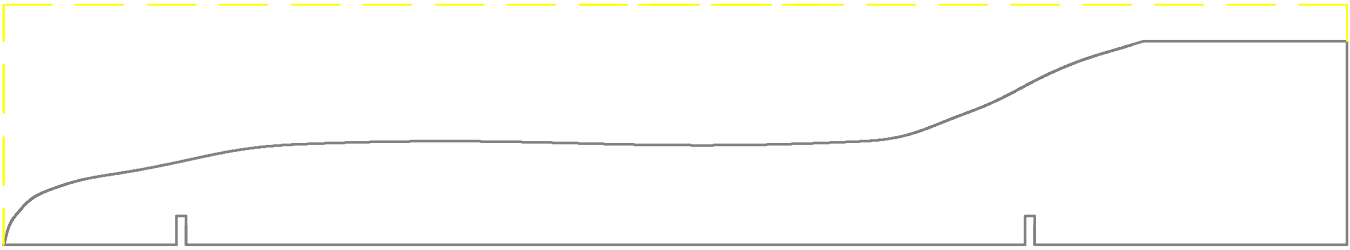






OLD STYLE BLOCK

MINIMOUSE – CUT PROFILE THEN SHAPE BODY


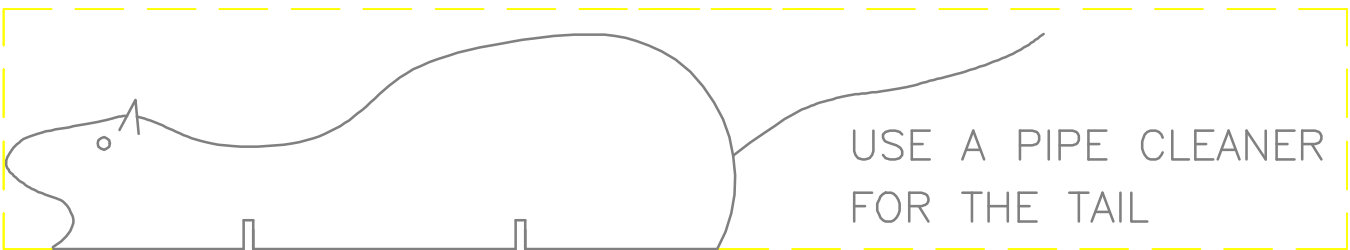


USE A PIPE CLEANER
FOR THE TAIL

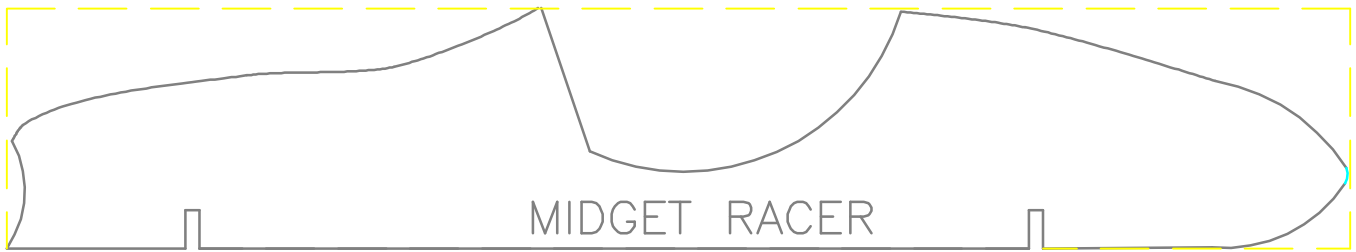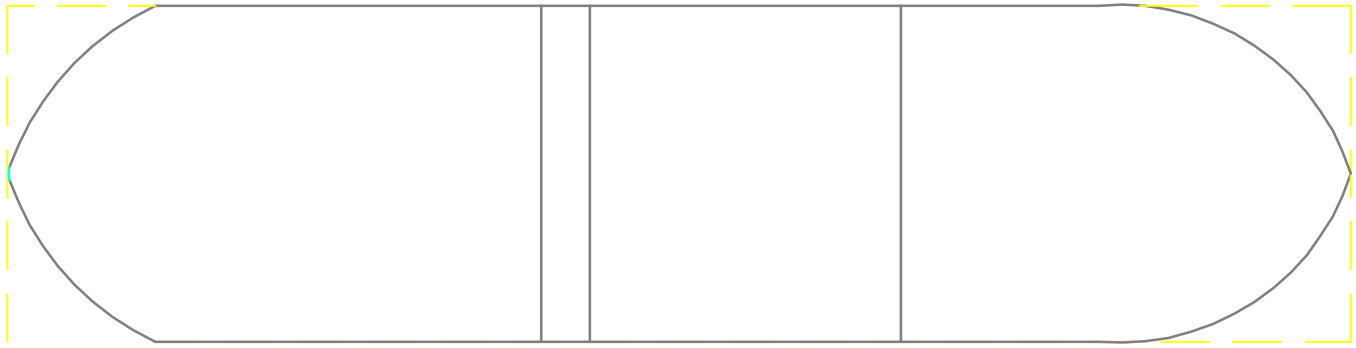


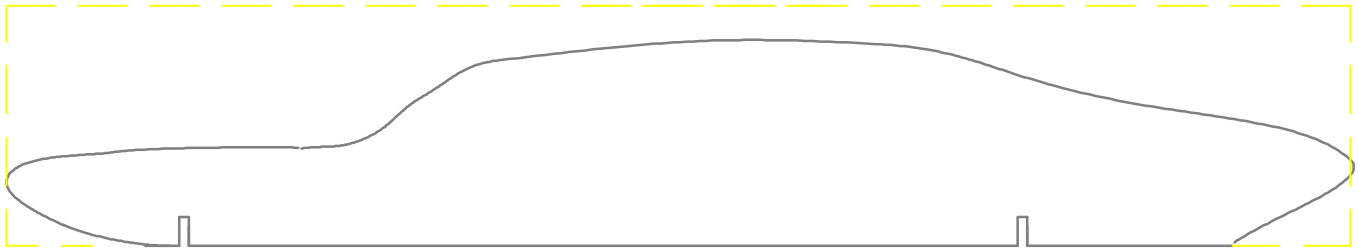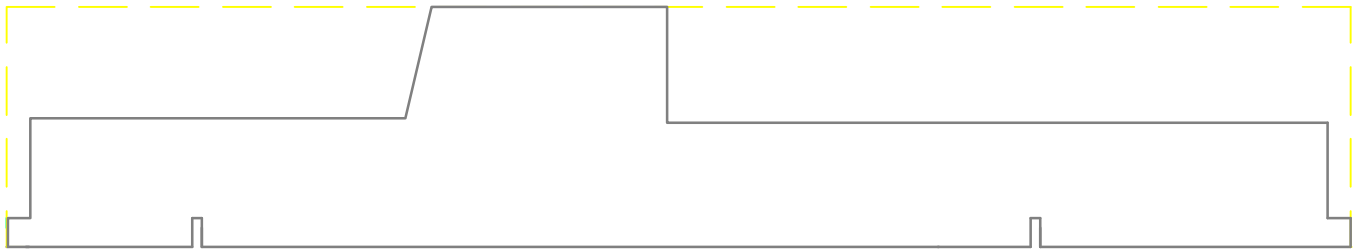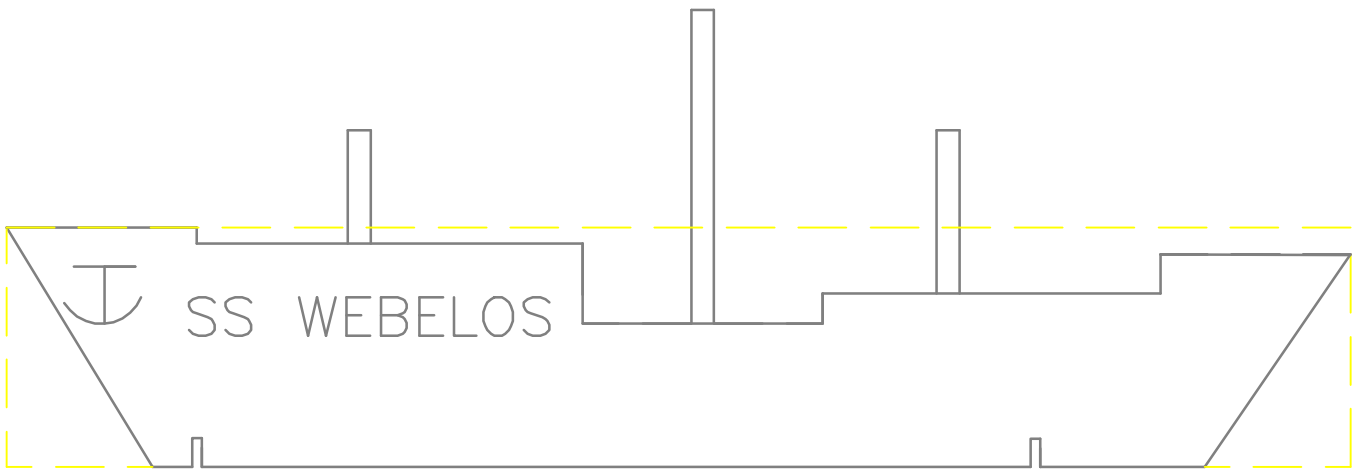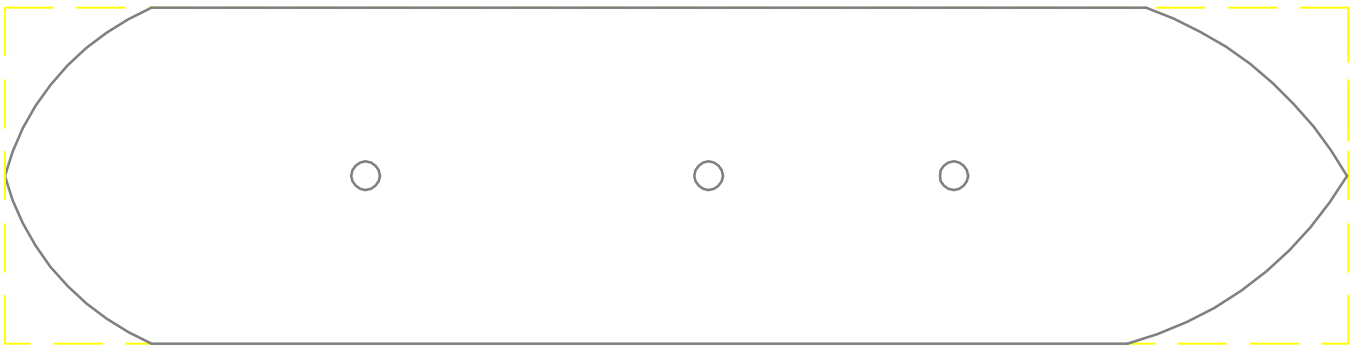


GLUE ON ROUNDED 1/2" DOWEL

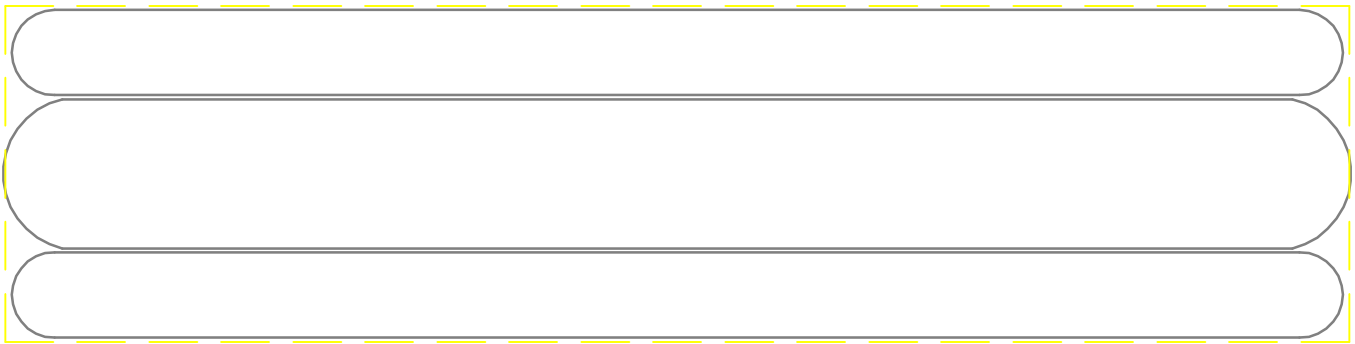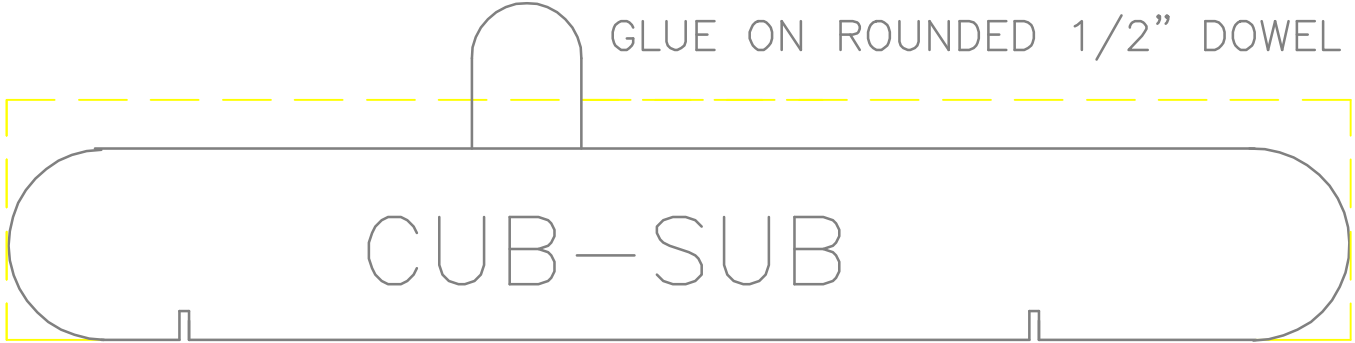


HOTDOGGER TOP VIEW

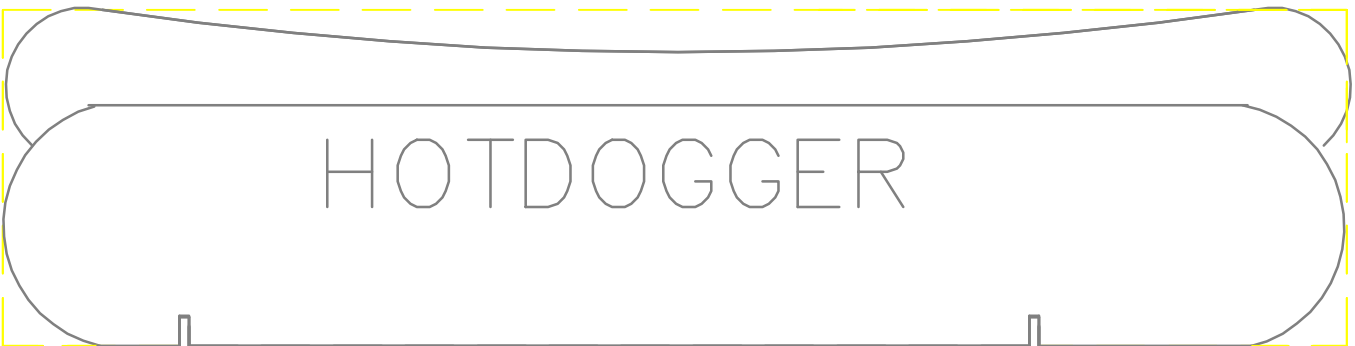





GLUE ADDITIONAL WOOD FOR HEIGHT

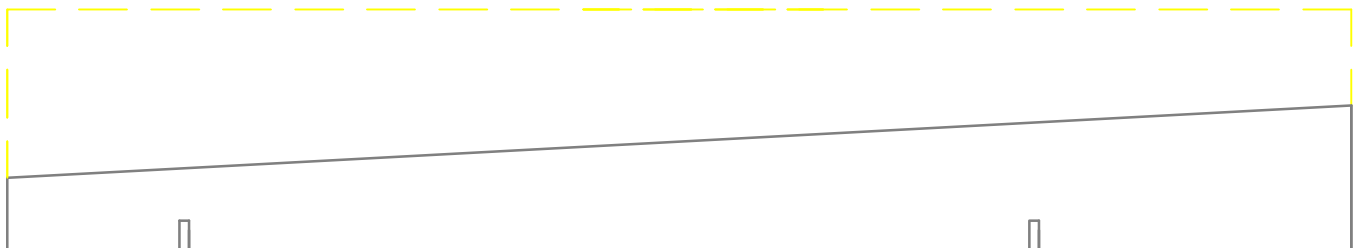

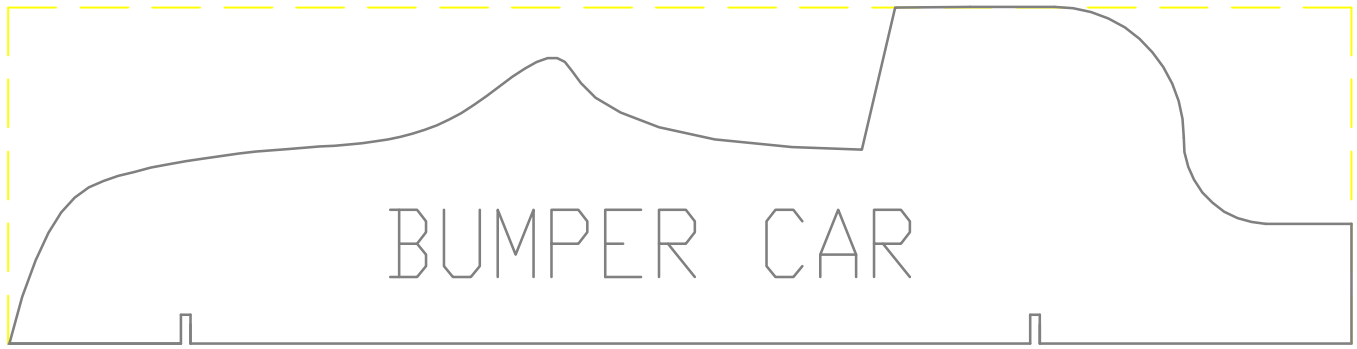


GLUE EXTRA WOOD FOR ADDITIONAL HEIGHT


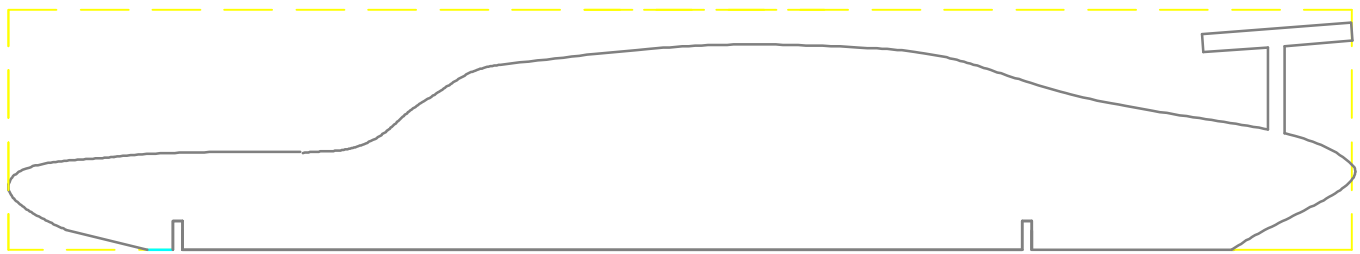


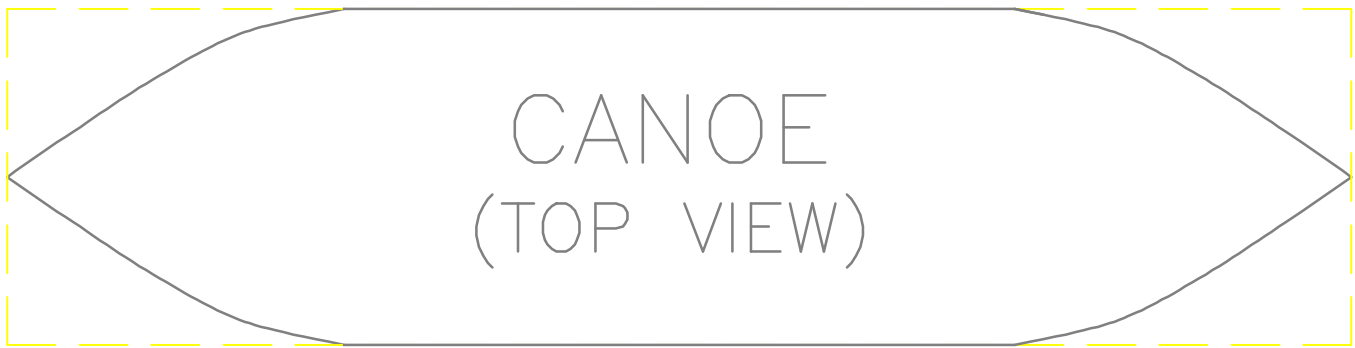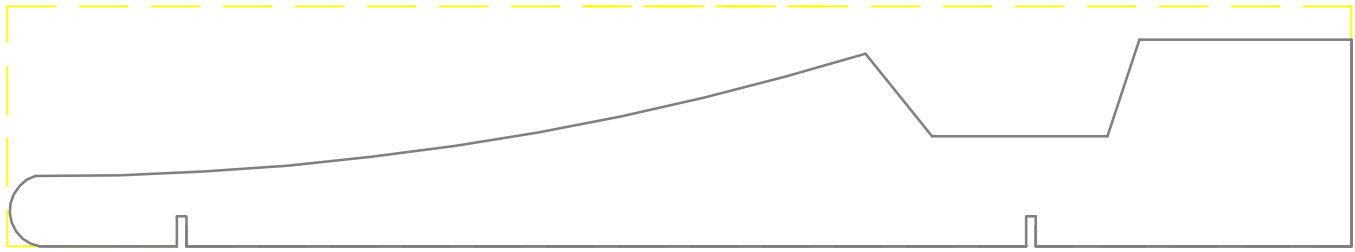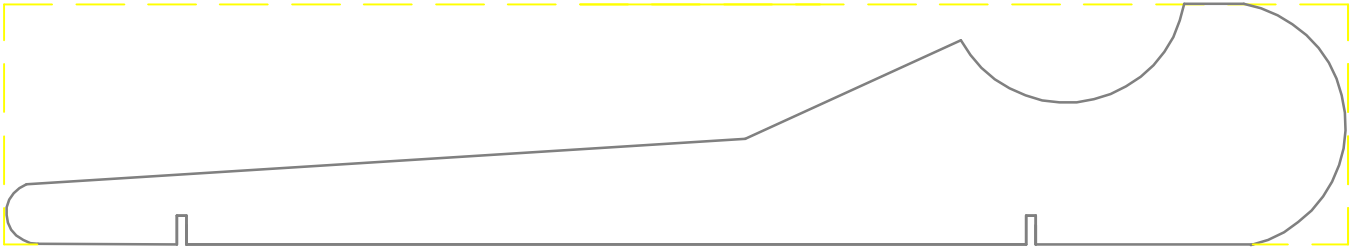


REQUIRES EXTRA HEIGHT

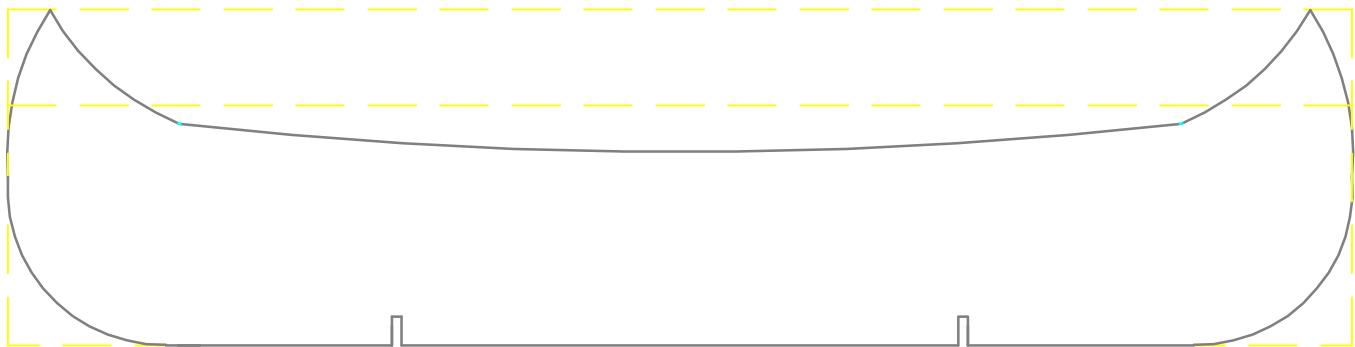

SHORTEN WHEELBASE

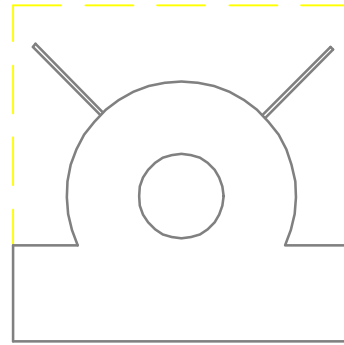
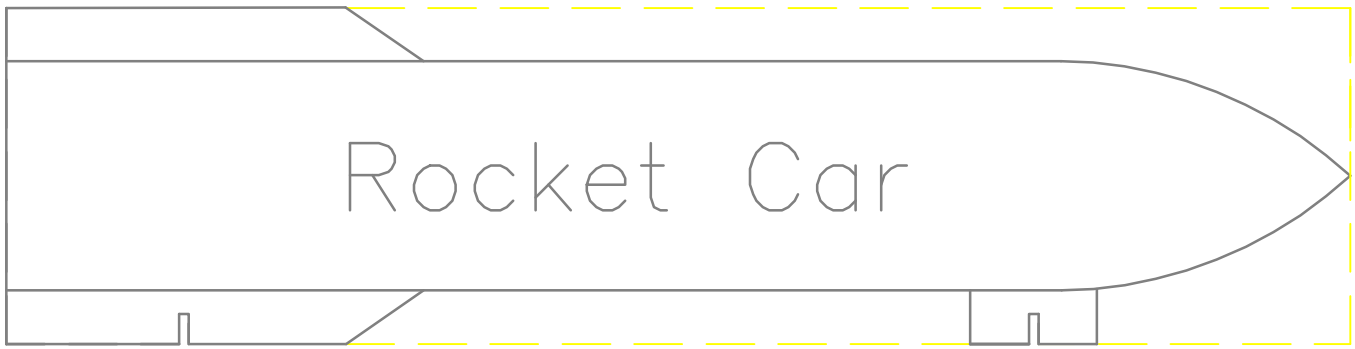


END VIEW

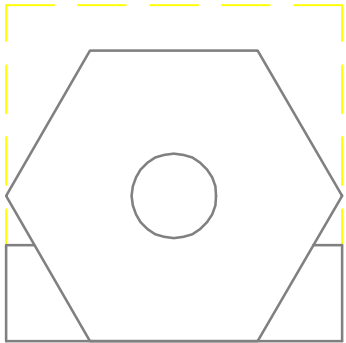

END VIEW

GLUE ADDITIONAL WOOD FOR THESE DESIGNS

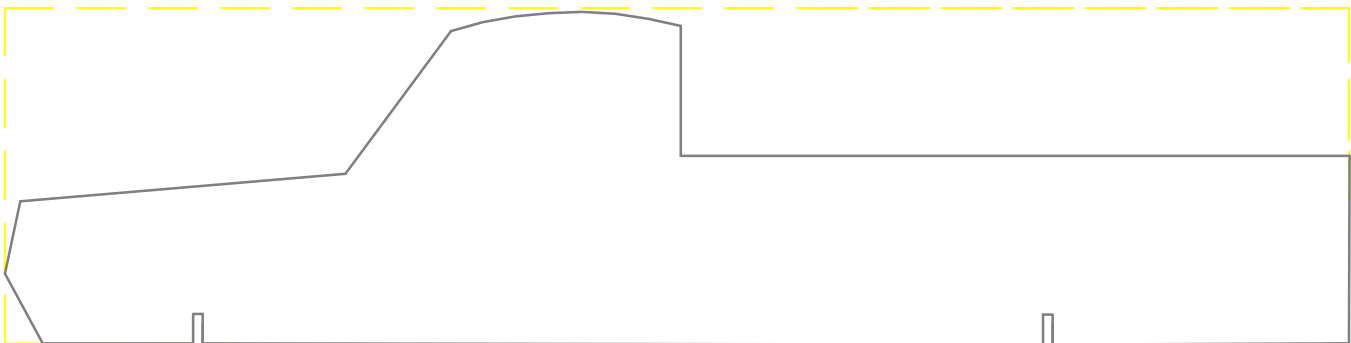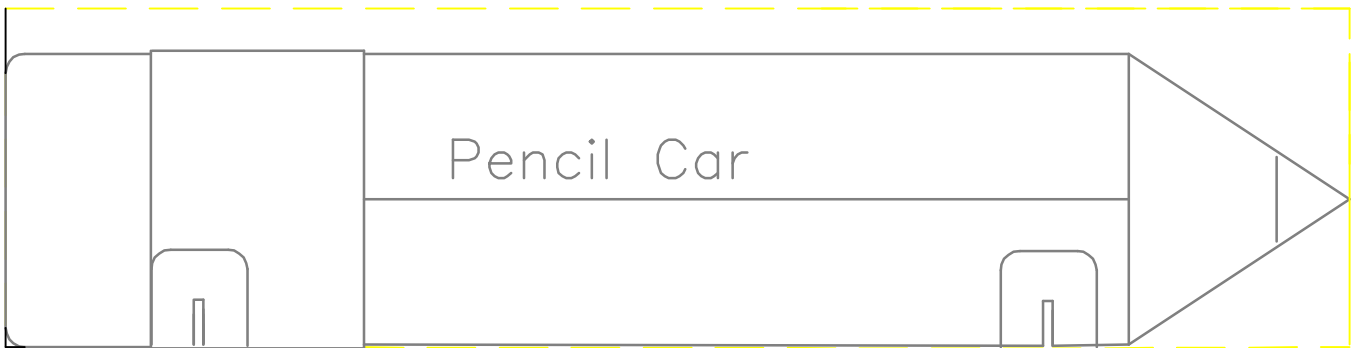

THE CRAYON CAR CAN BE CUT FROM THE STANDARD BLOCK THEN ROUTED TO REMOVE WOOD TO PROVIDE SPACE FOR ACTUAL CRAYONS TO BE INSERTED AS SHOWN. THE PAINT SCHEME COLORS DEPICT REALISTIC COLORS THAT MIGHT BE FOUND ON COMMERCIAL BOXES.

